


BATCH1

“E-BATCH1”: 适用于3590E/CPWE指示器的软件, 用于单一产品剂量系统。

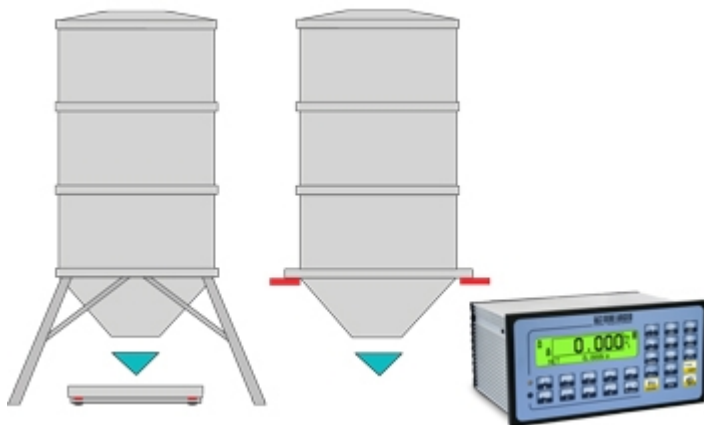

适用于3590EXT和CPWE重量指示器的软件, 用于创建单一产品计量系统, 适用于装料(适用于填充料斗、料仓或大袋, 或指导操作员进行手动计量)和卸料(适用于将材料按相同重量分份, 或从料仓中提取精确数量, 并管理重新装料)。包含500个配方数据库。

剂量功能

- **可选配料模式**: 卸料、自动或手动引导加料。
- **多种配料规模管理** (最多4个独立系统)。
- **生产程序管理**: 支持最多4种配方顺序配料, 自动选择下一配方并切换配料系统。
- **体积流量计管理**, 用于以升为单位的计量。
- **计量开始时空罐检测**: 每个配方可编程设置空罐值。
- **自动打印计量数据**。
- **消耗量存储与打印**。打印记录可通过键盘快速调用。
- **自动校正飞行重量**。
- **可编程计量循环的重复**: 无限循环功能。
- **对计量重量的容差测试**, 带显示屏上的引导校正。
- **检查最大计量时间**。
- **报警指示**在显示屏上。
- **完全可编程的打印输出**, 兼容通过串口管理的任何ASCII打印机。

数据库

- **500个公式数据库**, 包含目标值、速度变化阈值、飞行模式、正负公差、最小皮重和最大皮重值, 以及两个重量设定值用于激活两个输出。
- 可通过手动编程设置活动和公式, 或通过PC软件 (Dinitools) 进行编程。

键盘功能

- **开始 / 重新开始剂量, 暂停 / 重置** 周期及配方引入/选择。
- **快速切换剂量目标**, 通过专用按键实现。
- **快速引入和选择剂量数据**。

输入/输出功能

- **启动 / 重启 剂量, 暂停 / 重置** 通过外部输入循环。
- **配方选择** 通过 2 个外部输入。
- **双剂量速度** (粗略和精细), 通过任何可用触点或模拟输出 (可选)。
- “精细”剂量触点可设置为持续激活或间歇激活 (**点动**)。
- 输入和输出具有可编程功能。
- **模拟输出** (可选), 与剂量重量或剂量速度成比例。
- **串行通信协议**, 用于编程配方、产品及管理循环。



- 外部Profibus接口 (可选), 用于编程配方和管理循环。



- 蓝牙连接 (可选), 通过PC或PDA进行快速无线编程活动和配方。



加载剂量示例



www.diniargeo.com

“YOUR WORLDWIDE PARTNER FOR WEIGHING,”

DINI ARGEO
FRANCE sarl
France

DINI ARGEO
GMBH
Germany

DINI ARGEO
UK Ltd
United Kingdom

DINI ARGEO WEIGHING
INSTRUMENTS Ltd
China

DINI ARGEO
OCEANIA
Australia



COMPANY HEADQUARTERS

Via Della Fisica, 20
41042 Spezzano di Fiorano Modena • Italy
Tel. +39.0536 843418

SERVICE ASSISTANCE

Via Dell'Elettronica, 15
41042 Spezzano di Fiorano Modena • Italy
Tel. +39.0536 921784

SALES AND TECHNICAL ASSISTANCE SERVICE